

Battery BacPac™

USER MANUAL + WARRANTY INFO

GoPro®
Be a *HERO*. ■■■■


FIRMWARE UPDATE

If you have an older HD HERO camera, you may need to download new firmware before using the Battery BacPac™.

To determine if you need new firmware:


With a full charge, attach battery BacPac to camera. If the camera's LCD displays a "2" next to the battery level icon, your camera has the latest firmware and no update is needed.

If no "2" symbol appears next to the battery power icon, then you will need to download and install the latest firmware for your camera at: gopro.com/firmware.

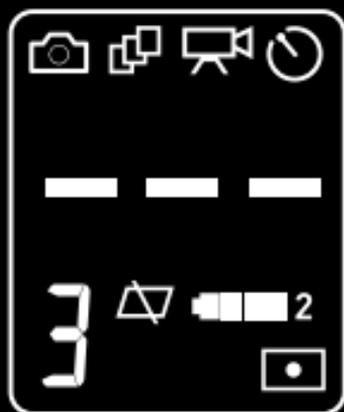

BATTERY BACPAC FEATURES


1. The Battery BacPac attaches to the back of the HD HERO camera providing double* battery life.
2. Your Battery BacPac can also function as a stand-alone USB charger for GoPro Li-ion Batteries.
3. The Battery BacPac plugs into any USB charging source (computer, wall, auto charger) to charge your battery.
4. Check battery power status with built in LED lights.

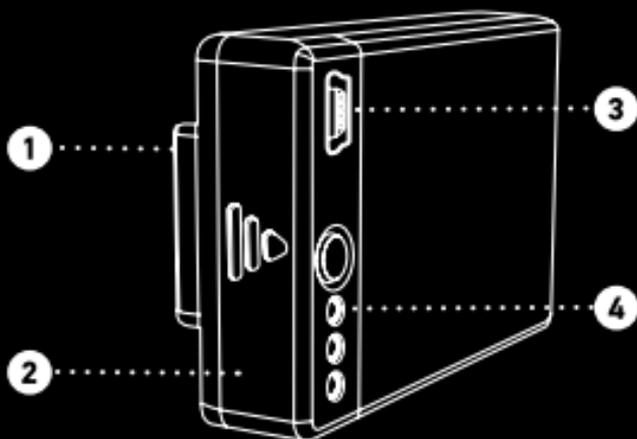

*Actual battery life may vary

ASSEMBLING BACPAC TO YOUR HD HERO

ATTACHING BACPAC TO HD HERO

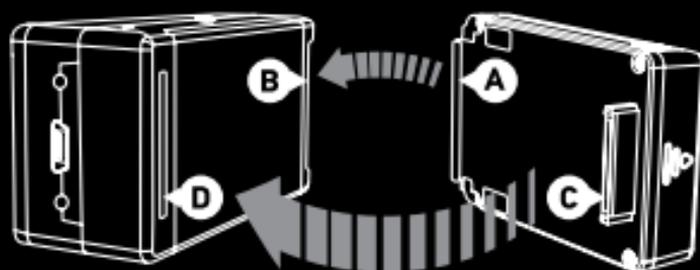


1. Slide hooked end of the BacPac (A) into the groove on the right side of the camera body (B).
2. Push BacPac connector (C) into the HERO Bus port (D) on the back of the camera.

REMOVING BACPAC FROM HD HERO




1. Pull back on left side of BacPac marked with the arrow to disconnect from the HERO bus port.
2. Slide hooked end of BacPac (A) out of camera groove (B).

INSERTING/REMOVING LI-ION BATTERY FROM BACPAC

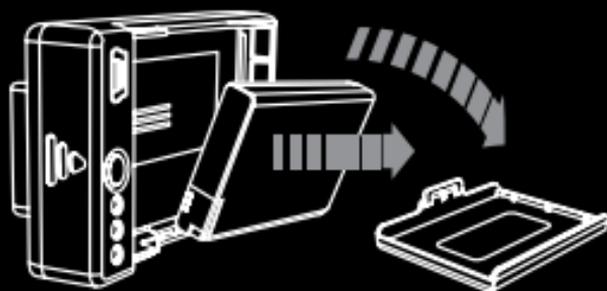


1. Remove battery door from the BacPac.
2. To remove the battery, pinch the sides of the battery with your fingers and pull outwards to remove.

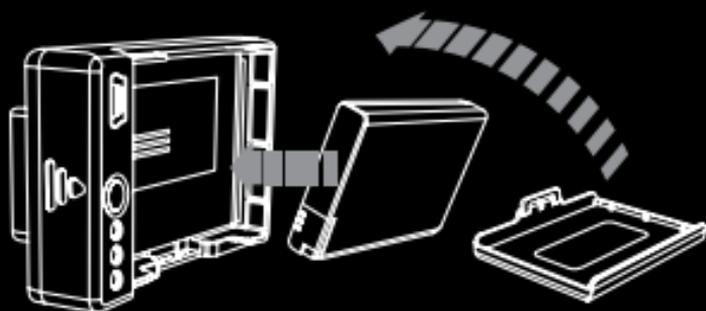

3. To insert the battery, align battery as illustrated and push into place.
4. Replace battery door onto the BacPac.

SWAPPING HOUSING DOORS

To insert the HD HERO & Battery BacPac assembly into the housing, you will need to replace the standard back door with one of the included back doors. A total of 2 doors are supplied for the Battery BacPac: 1 Waterproof Door and 1 Skeleton Door (non-waterproof). The skeleton doors allow for better audio and camera cooling when waterproofing is not needed.

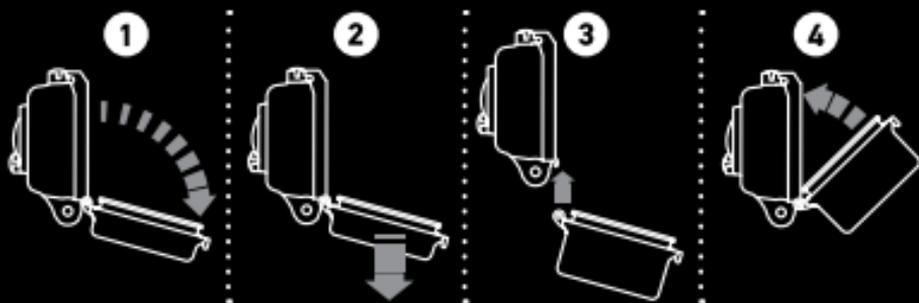

1. Open the backdoor of the housing so that it is hanging downwards.
2. Pull downwards on the backdoor until it snaps free from the hinge.
3. Line up replacement backdoor into the hinge opening.
4. Push upwards on the backdoor until it clicks into place.


USING THE BATTERY BACPAC

The camera's LCD display will display "2" next to the battery level icon to indicate that the Battery BacPac is attached and recognized by the camera (see page 1 for an example). When the camera is in use with the Battery BacPac connected, the camera will automatically use power from the BacPac battery first, and then switch to the camera battery for power once the BacPac battery dies. The battery conversion happens automatically and will NOT interrupt video recording that may be happening at that time.


CHECKING BATTERY BACPAC POWER LEVEL



1. Press the BacPac button (A) once and the LED lights (B) will illuminate to indicate power level.

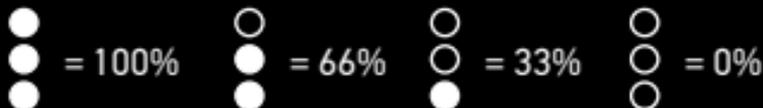

CHARGING THE BATTERY IN THE BACPAC

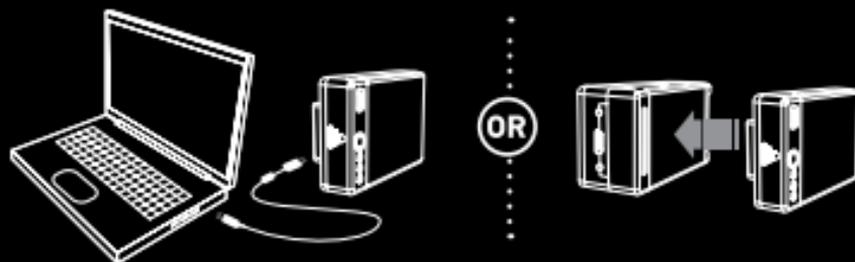

1. Connect the BacPac to a computer or any USB compatible wall or car charger such as a phone charger, etc. with the included USB cable.
2. The red LED will illuminate on the BacPac to indicate charging.
3. The LED will switch to green when the battery is fully charged.

IMPORTANT SAFETY AND HANDLING INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the Battery BacPac or other property.

HANDLING

The Battery BacPac contains sensitive components. Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into the Battery BacPac. Do not use the Battery BacPac if it has been damaged—for example, if Battery BacPac is cracked, punctured, or damaged by water.

AVOIDING WATER AND WET LOCATIONS WHEN NOT IN HOUSING

Do not use the Battery BacPac in rain, or near wash basins or other wet locations. Take care not to spill any food or liquid on the Battery BacPac. In case the Battery BacPac gets wet, turn off and unplug from camera before cleaning, and allow it to dry thoroughly before using again. Do not attempt to dry the Battery BacPac with an external heat source, such as a microwave oven or hair dryer. Damage to the Battery BacPac caused by contact with liquid is not covered under the warranty.

USING CONNECTORS AND PORTS

Never force a connector into a port. Check for obstructions on the port. If the connector and port don't join with reasonable ease, they probably don't match. Make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.

WARRANTY

This product is guaranteed against manufacturing defects for one (1) year from the original date of purchase.

GoPro's sole obligation in the event of such defects during this period is to repair or replace the defective part or product with a comparable part or product at GoPro's sole discretion. Except for such replacement, the sale, or other handling of this product is without warranty, condition or other liability even though the defect or loss is caused by negligence or other fault. Damage resulting from use, accident, or normal wear and tear is not covered by this or any warranty. GoPro assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of this product. In no event shall GoPro be liable for incidental or consequential damages relating to or resulting from the use of this product or any of its parts. Because of possible user resealing error, this product is not warranted against waterhousing leakage or any resulting damage. Visit gopro.com for more information.

Learn about more GoPro products
at: **gopro.com**

AM-W00-BATT-0B  Please Recycle